

PREMIER DECORATIVE ROLLER SHADES

HORIZONTAL FLAT SHEER SHADING

1. Position the blind:

Inside the recess: Decide the position of the blind so that it will be clear of any latches or fixtures.

Outside recess: Decide the position so that the overlaps on the both side of the recess are equal.

2. Fixing the brackets:

 
The brackets are designed for face or top fixing to frame, wall or ceiling.

a. Having decided the positioning of the blind, preset it to the desired position making sure it is centred and level.

b. Mark the location of each bracket with a pencil. Make sure they are on the same line

c. Place each bracket on its location markings and mark through the desired screw hole positions.

d. Use the screws provided to fix the brackets to wall or ceiling.

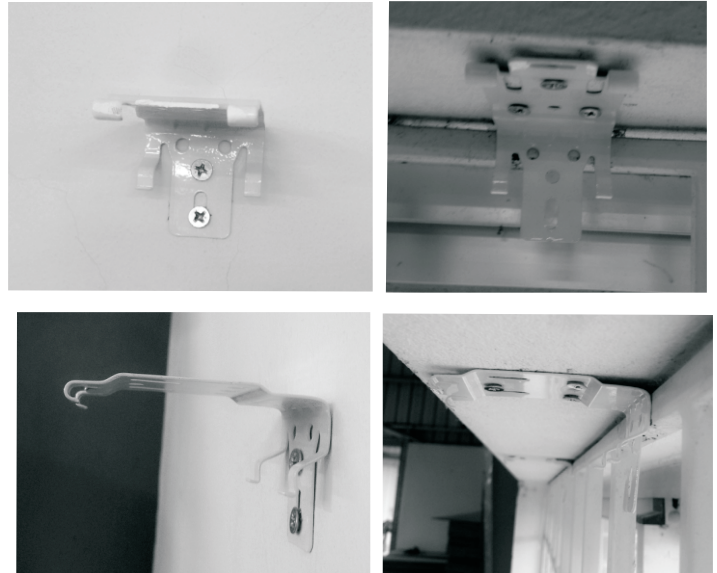

3. Installing the blind.

Hold the cassette parallel with brackets, make sure the back panel of cassette sit on the back hooks of the bracket where it was attached to the wall. Push it forward until the locking mechanism clicks.

Attention: After the locking mechanism clicks, if you see the front hooks of the brackets stay firm into the top edge of cassette, that is correct.

Warning

Please don't let the front hooks of cassette hooks into the front top edge of the cassette first, as this will make it impossible to install.

 


4. Operating the blind.

The beaded chain side control at the right hand end or left hand end of blind is used to both raise and lower the blind to the height required.

Please retain these instructions for the future reference

Thank you for purchasing this product. Please read the instructions and warning carefully before hand to ensure safe and satisfactory use of this product.

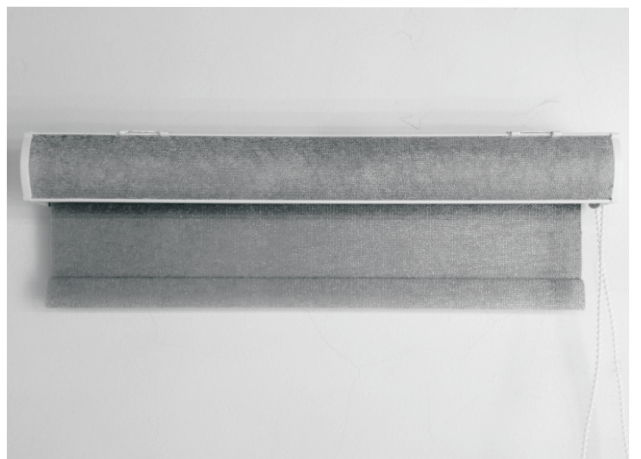

ONE YEAR LIMITED WARRANTY:

What is covered by this warranty and for how long:

All products are warranted against defects in materials and workmanship for a period of one (1) year from the date of purchase, provided that the product is installed according to the product instructions. We reserve the right to determine if your piece warrants repair or partial replacement of any parts. In the unlikely event that the entire piece is defective, we will replace this window covering with a new window covering of equal or superior value; this shall be your sole remedy under this warranty.

Who and what is covered by this warranty:

The original customer in a residential application within the United States is covered under this warranty; proof of purchase is required. Removal, installation or re-installation of any window covering is not covered under this warranty. This warranty does not cover damage or defects caused by or resulting from improper maintenance, neglect or improper use, abuse, misuse, neglect, accidents, acts of god, alteration, commercial use, installation, removal or re-installation or exposure to excessive moisture.

Your rights under State Law:

This warranty gives you the specific legal rights. You may also have other rights, which may vary from state to state. We will not be liable for **INCIDENTAL OR CONSEQUENTIAL DAMAGES** or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES, OR WARRANTIES.

WARNING:



Young children can strangle in cord and bead chain loops. They can also wrap cords around their necks and strangle.

- Always keep cords and bead chains out of children's reach.
 - Move cribs, playpens and other furniture away from cords and bead chains as children can climb furniture to get to cords.
 - Attach a cord tension device or cord guide to the wall. This can prevent children from pulling cords and bead chains around their necks.
-

ROLLER SHADE INSTALLATION INSTRUCTIONS

CHAIN AND CLUTCH ROLLER SHADE

Thank you for purchasing your custom roller shades. With proper installation your shades should look beautiful and provide years of service. Please check all parts and read these instructions, before starting installation.

 
MOUNTING HARDWARE KIT INCLUDES:



Mounting
Brackets



Screws

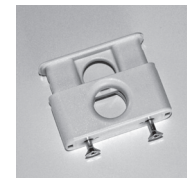

Chain Tensioner
and Screws

Note: Actual Cord Tensioner supplied may vary.

All bead chain loops should be secured with tensioners to prevent the risk of strangulation. Keep chain loops away from children and pets. Plastic chain loops feature a breakaway connector, which also helps to reduce the risk of strangulation.

TOOLS THAT MAY BE REQUIRED:

Pencil, Tape Measure, Drill, Screw Driver, Level and Step Stool

INSTALLING YOUR SHADE:

NOTE: For wallboard or plaster, use anchors designed for hollow walls (not included). For concrete, stone and brick, use a masonry drill bit and anchors designed for masonry (not included).

STEP 1: INSTALL BRACKETS

1. Identify the clutch end and idle end brackets.
The idle end bracket has one hole in the center, for the spring-loaded pin in the idle end. The clutch end bracket has slots that will accept the lugs on the clutch. The brackets can be installed to the wall (face mount) or to the ceiling or underside of the window recess (top mount).
[Figure 1 & 2]
2. Mark the desired positions of the brackets with a pencil. Make sure the brackets are the correct distance apart. Mark the locations of the bracket holes and drill pilot holes for the screws.



Figure 1 – top mount



Figure 2 – face mount

Make sure that the brackets are in line with each other and level — if they are not level the roller shade may not fit correctly or it may not roll up straight. This can cause the fabric to rub against the bracket on either side, which will cause fraying of the fabric.

STEP 2: INSTALL SHADE

Hold the shade up and insert the clutch into the clutch end brackets, making sure the lugs fit into the slots in the bracket. Then push in the spring-loaded pin on the idle end of the shade and move the shade up so that the pin engages with the hole in the idle end bracket. The pin should snap into the bracket and the shade will now be securely installed. [Figure 3]



Figure 3

STEP 3: INSTALL THE CHAIN TENSIONER

Shades with clutch controls come with a continuous chain loop, which should always be screwed to the wall with the included chain tensioner.

1. The chain tensioner should be installed to a flat surface, so the bead chain is taut but not stretched. Be sure not to twist or cross the chain.
[Figure 4]



Figure 4

On inside mount shades, the tensioner may be attached to the windowsill or to the inside of the window frame. For outside mount or wall mount shades, the bracket may be mounted to the exterior of the window frame or the wall.

2. With a pencil, mark the desired location of the screw holes for the tensioner and then drill pilot holes. Then install the tensioner with the screws, making sure that the tensioner is fully installed, so that the spring is pushed in and the chain passes smoothly through the guide. [Figure 4]

The chain tensioner forms an important safety function by keeping chain loops away from small children. Never operate this shade without a functioning and correctly installed chain tensioner.

OPERATING YOUR SHADE

The shade can be raised and lowered by pulling on the front or the back chain.

ROLLER SHADE INSTALLATION INSTRUCTIONS

ONE YEAR LIMITED WARRANTY:

What is covered by this warranty and for how long:

All products are warranted against defects in materials and workmanship for a period of one (1) year from the date of purchase, provided that the product is installed according to the product instructions. We reserve the right to determine if your piece warrants repair or partial replacement of any parts. In the unlikely event that the entire piece is defective, we will replace this window covering with a new window covering of equal or superior value; this shall be your sole remedy under this warranty.

Who and what is covered by this warranty:

The original customer in a residential application within the United States is covered under this warranty; proof of purchase is required. Removal, installation or re-installation of any window covering is not covered under this warranty. This warranty does not cover damage or defects caused by or resulting from improper maintenance, neglect or improper use, abuse, misuse, neglect, accidents, acts of God, alteration, commercial use, installation, removal or re-installation or exposure to excessive moisture.

Your rights under State Law:

This warranty gives you the specific legal rights. You may also have other rights, which may vary from state to state. We will not be liable for **INCIDENTAL OR CONSEQUENTIAL DAMAGES** or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES, OR WARRANTIES.

MOTORIZED ROLLER SHADE

Thank you for purchasing your custom roller shades. With proper installation your shades should look beautiful and provide years of service. Please check all parts and read these instructions, before starting installation.

MOUNTING HARDWARE KIT INCLUDES:



Mounting bracket



Screws

TOOLS THAT MAY BE REQUIRED:

Pencil, Tape Measure, Drill, Screw Driver, Level and Step Stool

INSTALLING YOUR SHADE:

NOTE: For wallboard or plaster, use anchors designed for hollow walls (not included). For concrete, stone and brick, use a masonry drill bit and anchors designed for masonry (not included).

STEP 1: INSTALL BRACKETS

1. Brackets for motor end and idle end are same, they have slots that will accept lugs on motor and idle end. The brackets can be installed to the wall (face mount) or to the ceiling or underside of the window recess (top mount). [Figure 1 & 2]



Figure 1 - top mount

2. Mark the desired positions of the brackets with a pencil. Make sure the brackets are the correct distance apart. Mark the locations of the bracket holes and drill pilot holes for the screws.



Figure 2 - face mount

Make sure that the brackets are in line with each other and level — if they are not level the roller shade may not fit correctly or it may not roll up straight. This can cause the fabric to rub against the bracket on either side, which will cause fraying of the fabric.

STEP 2: INSTALL SHADE

Hold the shade up and insert the motor end into the brackets, making sure the lugs fit into the slots in the bracket. Then push in the spring-loaded pin on the idle end of the shade and move the shade up so that the pin engages with the slot in the idle end bracket. The pin should snap into the bracket and the shade will now be securely installed

Figure 3



OPERATING YOUR SHADE

The shade can be raised and lowered by using remote to control.

Note:

1. The remote(s) are programmed for the shades from the factory. It's ready to operate, please do not program again
2. **IMPORTANT:** Do not operate the remote control until all blinds being installed in the window. Failing to do so may result in damage to the motors.
3. The remote(s) are able to control either 5 or 15 shades. The channel number on the remote is the same number at the white label on the back of the shade. E.g.: channel 1 for shade no.1, channel 2 for shade no. 2.
4. Programmed from the factory includes the setting of the limits.
5. If your shade stops working, please charge the battery.